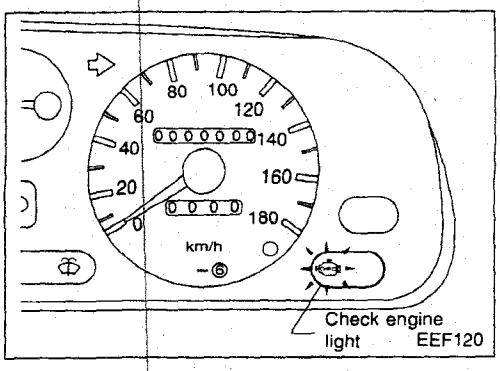

Self-diagnosis

CHECK ENGINE LIGHT

A check engine light has been adopted on all models. This light blinks simultaneously with the RED L.E.D. on the E.C.U.

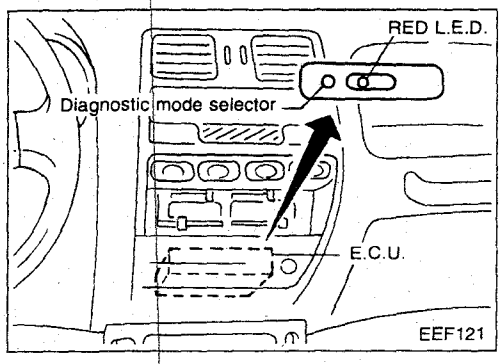

E.C.U. L.E.D.

The E.C.U. is located behind the bottom of the instrument panel and only has one RED L.E.D.

SELF-DIAGNOSTIC FUNCTION

Condition \ Mode		Mode I	Mode II
Ignition switch in "ON" position	Engine stopped	BULB CHECK	SELF-DIAGNOSTIC RESULTS
	Engine running	MALFUNCTION WARNING	EXHAUST GAS SENSOR MONITOR